
IT'S JUST SO EASY....

IT'S JUST SO EASY...

The Special Fillers Applicator consists of: 1) Plastic body with grooves to remove all König waxes and Ceramic Filler 2) Red cleaning comb to clean the grooves 3) Sanding & Polishing Cloth 4) Grey Sanding Pad

The Special Fillers Applicator consists of: 1) Plastic body with grooves to remove all König waxes and Ceramic Filler 2) Red cleaning comb to clean the grooves 3) Sanding & Polishing Cloth 4) Grey Sanding Pad

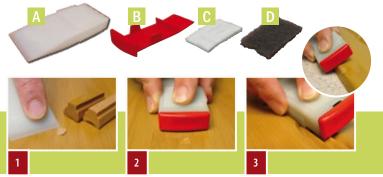



Working with the leading edge: The leading edge is used not only to apply Soft Wax (see picture above), but also to strip off Quick Filler and Hard Wax Matt.

Working with the grooves of the Special Fillers Applicator: Use the pointed grooves on the flat area to level off excess filler (see picture 2). Always use rounded grooves on edges. Use on inner edges: Use rounded grooves (MM) on rounded edges and pointed grooves (MM) on rectangular, sharp inner edges.

Working with the leading edge: The leading edge is used not only to apply Soft Wax (see picture above), but also to strip off Quick Filler and Hard Wax Matt.

Working with the grooves of the Special Fillers Applicator: Use the pointed grooves on the flat area to level off excess filler (see picture 2). Always use rounded grooves on edges. Use on inner edges: Use rounded grooves (M) on rounded edges and pointed grooves (M) on rectangular, sharp inner edges.



Sanding & Polishing Cloth: Use the white side of the cloth to dull and the green side to polish the filled area.



Sanding and polishing: The dark sanding pad is used to sand and to strip off hard filler residue (e.g. Hard Wax and Hard Wax PLUS).



Cleaning of the Special Fillers Applicator: Use the jagged comb of the inlet part to clean the body of the Special Fillers Applicator (if necessary, with warm water).



Sanding & Polishing Cloth: Use the white side of the cloth to dull filled area.



Sanding and polishing: The dark sanding pad is used to sand and and the green side to polish the to strip off hard filler residue (e.g. Hard Wax and Hard Wax PLUS).



Cleaning of the Special Fillers Applicator: Use the jagged comb of the inlet part to clean the body of the Special Fillers Applicator (if necessary, with warm water).

picobello® by Heinrich König & Co. KG | Distributed by KONIG NORTH AMERICA, LLC 2800 Black Lake Place, Unit D PHILADELPHIA, PA 19154 | PHONE: 215 - 426 - 6216

picobello® by Heinrich König & Co. KG | Distributed by KONIG NORTH AMERICA, LLC 2800 Black Lake Place, Unit D PHILADELPHIA, PA 19154 | PHONE: 215 - 426 - 6216